

RECUVO


EN Installation instructions



1. Installation and commissioning may only be carried out by authorised specialists and wired in accordance with the latest IEE electrical regulations or the national standards.

2. Mains power must be switched off before carrying out installation.

3. The manufacturer, shall not be liable for any damage resulting from inappropriate modifications to the luminaire or faulty installation.

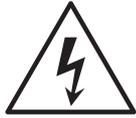

4. Caution, risk of electric shock.

The control gear provides basic insulation between the LV supply and the control circuit.

5. The light source contained in this luminaire shall only be replaced by the manufacturer or their service agent or a similar qualified person.

6. If the external flexible cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or their service agent or a similar qualified person in order to avoid a hazard.




You can help protect the environment!


Please remember to respect the local regulations: hand in non-working electrical equipment to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection service.

| SAP code | Proposed description | CCT | Wattage | Finish | Voltage | Ta | IP |
|----------|----------------------|-------|---------|--------|-----------------------|-----------------|---|
| 96652624 | RECUVO N 822 HFI | 2200K | 3.5W | White | 100V-240V ~50/60Hz | -20°C - 50°C | INSIDE THE WALL-IP20 OUTSIDE THE WALL-IP44 |

RECUVO N

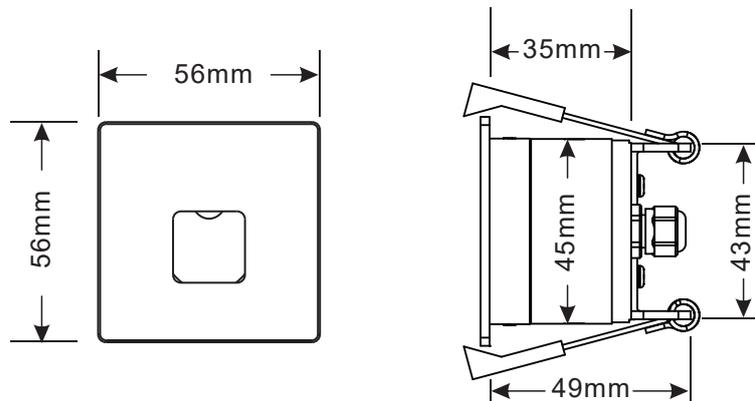

DALI Driver

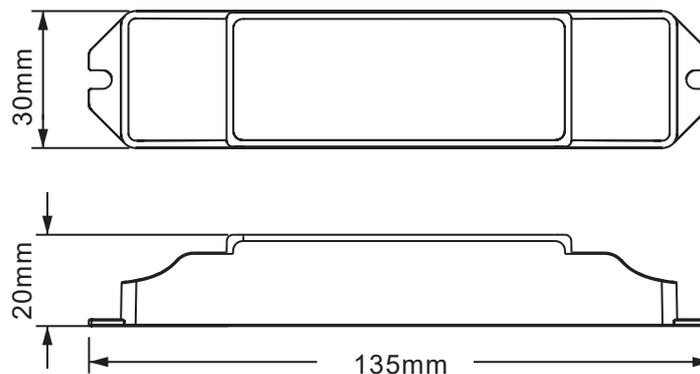


RECUVO


- 1 Before any electric operation, please turn off the power. Wall recessed mounted, cut-out Ø49-51mm




Cut-out
Ø49-51mm

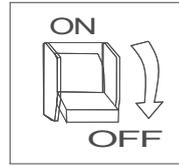


- Before wiring the product, disconnect the power.
- The installation requires qualified personnel.

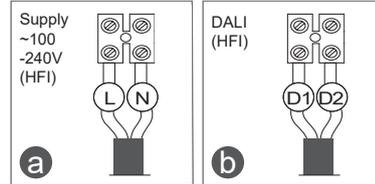

- 2 Connect the power cable to DALI control gear.

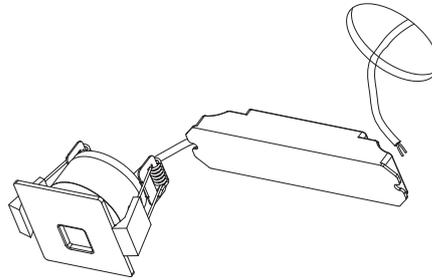


Wiring Diagram

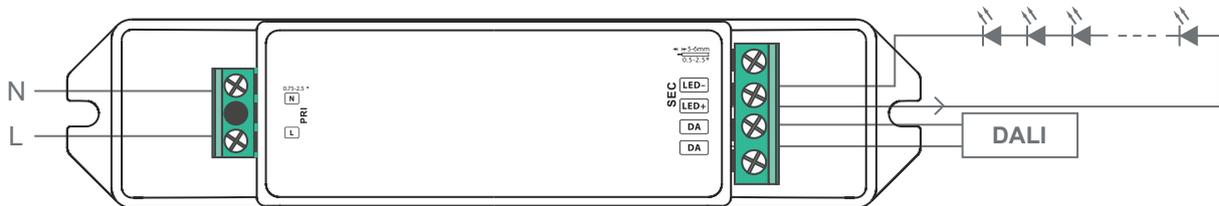


Wire diameter : 0.75-2.5mm
Strip length: 4.5-5mm

- 3 Put the luminaire and the control gear inside the predrill wall cut-out, and fixed the position with the 2 side locks.

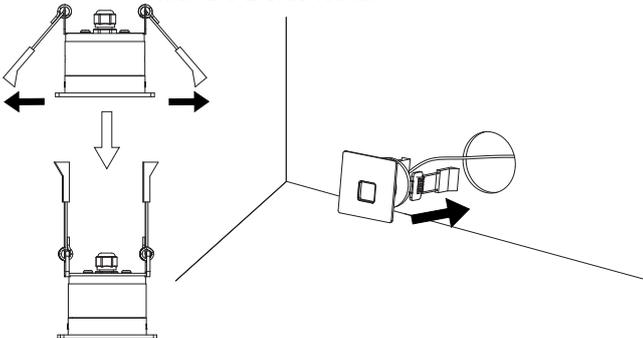

- 4 Turn on the power switch to check is the luminaire is working.

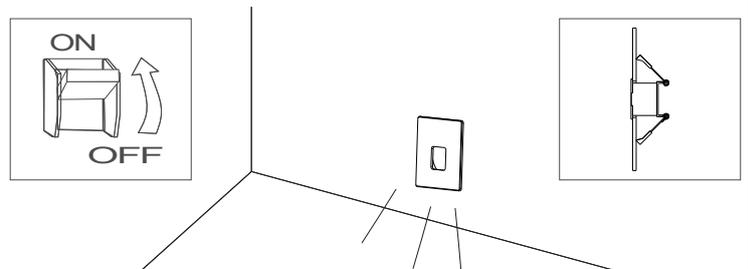

ATTENTION:

- In case breakage or damage of the glass or failure in operation of the LEDs please contact the manufacturer for replacement.
- Do not use pressure washers to clean the fixture.