


CRUZ 200  
CRUZ 200嵌入式筒灯  
Exposed IP54, recessed IP20  
外露部分IP54, 嵌入部分IP20

THORN

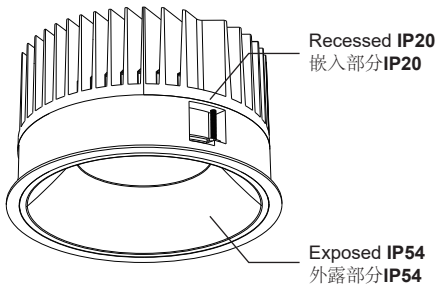

Description	Input	PF	Wattage	Operating	Dimension
CRUZ 200 40W HF	220-240V	0.9	40W	-20~45℃	φ216x132
CRUZ 200 56W HF	220-240V	0.9	56W	-20~45℃	φ216x132
CRUZ 200 40W HFA	220-240V	0.9	40W	-20~45℃	φ216x132
CRUZ 200 56W HFA	220-240V	0.9	56W	-20~45℃	φ216x132
CRUZ 200 40W HFX	220-240V	0.9	40W	-20~45℃	φ216x132
CRUZ 200 56W HFX	220-240V	0.9	56W	-20~45℃	φ216x132




(EN) Mounting instructions



(ZH) 安装说明

1 Packaging Details


CRUZ 200

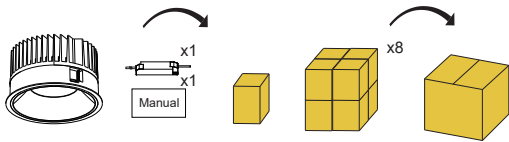


2 Product Dimension (mm)

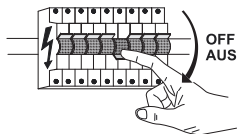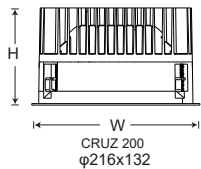

4 Wiring Mode

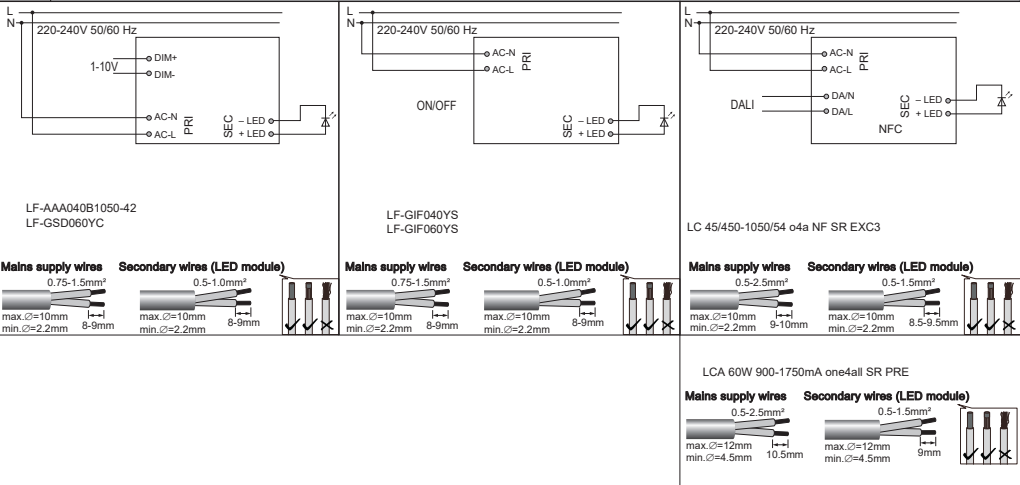


1 Thickness of ceiling

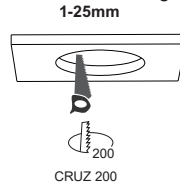


Wear gloves

2

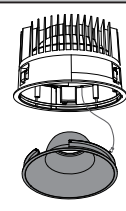


Wear gloves

3

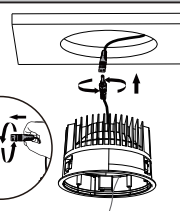


Wear gloves

4

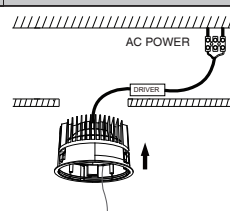


Wear gloves

5

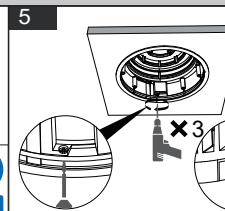


Wear gloves

6

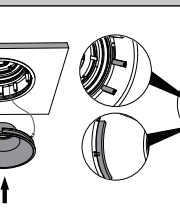


Wear gloves

7

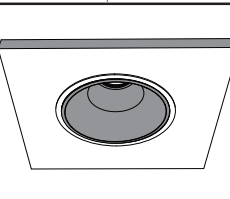

Wear gloves

 5





Instructions for assembly, installation and operation! This product is for indoor lighting use only.

The installation and commissioning of the luminaire as well as any modification to the luminaire may only be performed by authorized personnel (qualified electrician). The luminaire is used exclusively for lighting and is to be installed in accordance with the national installation regulations. Caution! Make sure that the luminaires and power supply units are always disconnected from the mains supply during wiring and installation work. Otherwise, the LED modules may be destroyed. Hot plug-in is not permitted. Hot plug-in may result in damage to the luminaire and entail loss of warranty claims! The manufacturer is not liable for damages resulting from improper or faulty installation or operation or from unauthorized modifications to the luminaire. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similarly qualified person.



Caution, risk of electric shock!

1. If the external soft cable or soft cord of the luminaire is damaged, it should be replaced by the manufacturer or its service agent or similar qualified person to avoid danger.
2. The insulation between the LV power supply and the control conductor (FELV) is basic insulation.



The luminaire cannot be covered with thermal insulation matting or similar materials



装配、安装和操作说明！本产品仅限室内照明使用。

灯具的安装、调试及任何变动仅可由经授权的专业人士（具有资质的电工）执行。

灯具仅用于照明，并且需要根据国家的规定安装。注意！

在灯具和供应单元的布线和安装过程中，一定要断电工作。不遵守规定会导致LED模块的损坏。

严禁热插拔。热插拔可能导致灯具的损坏，以及保修失效！

对于因错误安装、操作不当或擅自改动灯具而导致的损失，制造商概不负责。

该灯具的光源仅可由制造商、制造商指定的技工或具有类似资质的人士替换。

注意，有触电的危险！



1. 如果此灯具的外部软缆或软线损坏了，该线要由制造商或其服务代理商或类似的有资格的人更换，以避免发生危险。
2. LV电源与控制导体（FELV）之间的绝缘为基本绝缘。



灯具不能用隔热垫或类似材料覆盖。