




EN Installation Instructions

- 
1. Installation and commissioning may only be carried out by authorized specialists and wired in accordance with the latest IEE electrical regulations or the national standards.


2. Mains power must be switched off before carrying out installation.

3. The manufacturer, shall not be liable for any damage resulting from inappropriate modifications to the luminaire or faulty installation.


4. This luminaire has no user replaceable components. The light source contained within this luminaire shall only be replaced by the manufacturer or an approved agent.

5. Caution, risk of electric shock.
The control gear provides basic insulation between the LV supply and the control circuit.

| SAP Code | Product Description | EAN Code | Input | PF | Power | Operating temperature | L x W x H (mm) |
|----------|---|---------------|------------------|------|-------|-----------------------|----------------|
| 96651966 | SIRIO SPOT LED2000-930-55 MT3 DIM ZM WH | 9300736555944 | 220-240V 50/60Hz | >0.9 | 25W | -20~40°C | 189 x 80 x 233 |
| 96651967 | SIRIO SPOT LED2000-930-55 MT3 DIM ZM BK | 9300736555951 | 220-240V 50/60Hz | >0.9 | 25W | -20~40°C | 189 x 80 x 233 |
| 96651968 | SIRIO SPOT LED2000-930-55 STD DIM ZM WH | 9300736555968 | 220-240V 50/60Hz | >0.9 | 25W | -20~40°C | 189 x 80 x 233 |
| 96651969 | SIRIO SPOT LED2000-930-55 STD DIM ZM BK | 9300736555975 | 220-240V 50/60Hz | >0.9 | 25W | -20~40°C | 189 x 80 x 233 |

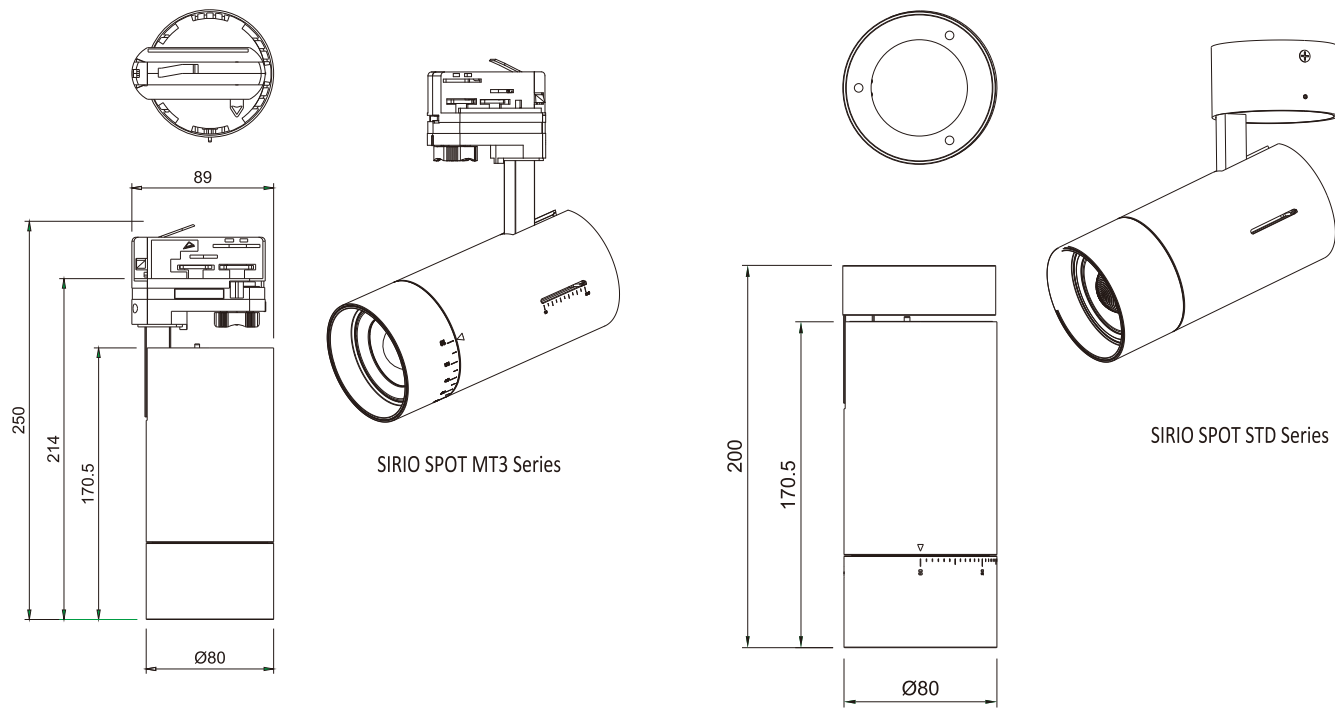

SIRIO SPOT LED MT3 series

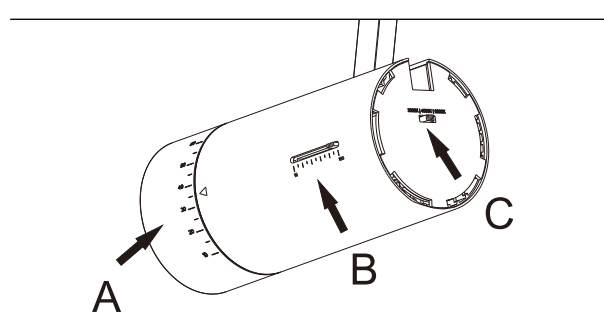


A: Adjust the beam angle via rotating the front ring.

B: Adjust the brightness via sliding the control button.


C: Select the color temperature via pulling the button.

1

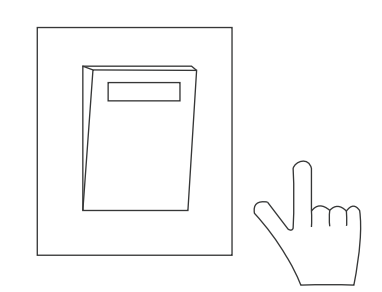


Turn off the power

2

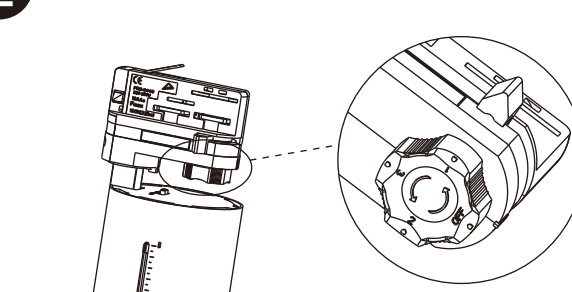


Turn the power adaptor to OFF

3

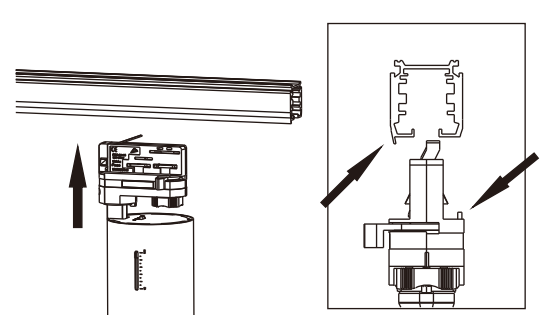


Slot the luminaire into the track bar

4

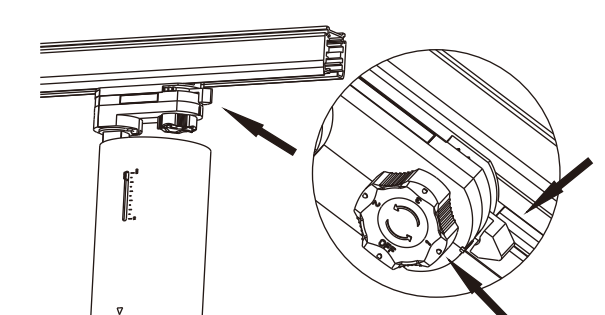


Turn the handle 90 degree to lock the luminaire on the track bar

5

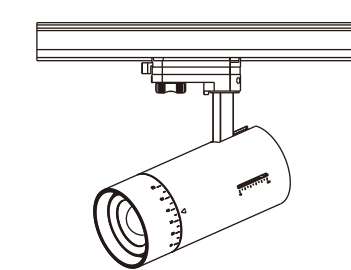


Adjust the illumination angle of the luminaire

6

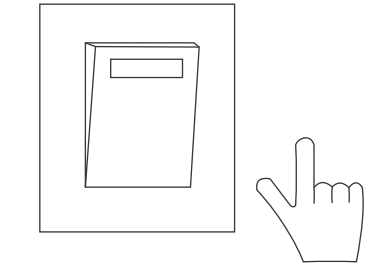

Turn on the power

SIRIO SPOT LED STD Series

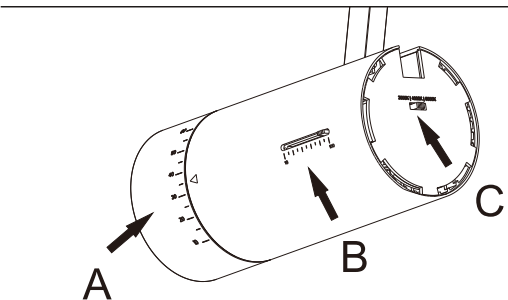


A: Adjust the beam angle via rotating the front ring.

B: Adjust the brightness via sliding the control button.


C: Select the color temperature via pulling the button.

1

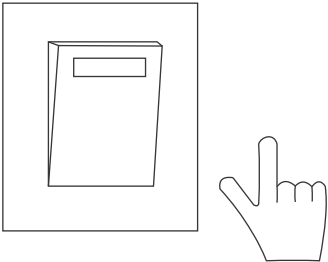


Turn off the power

2

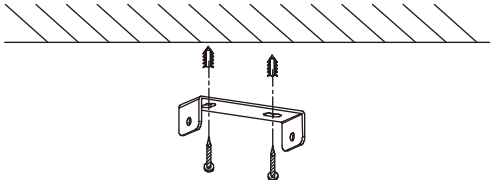


Install the mounting plate on the ceiling

3

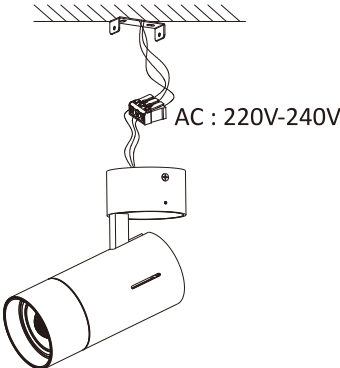


Connect AC cable on the terminal block, N, L and E

4

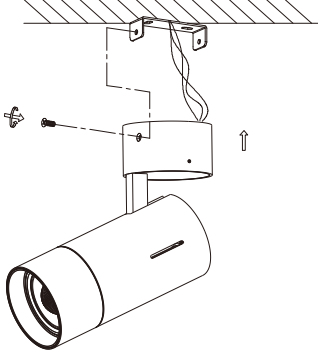


Install the luminaire with the mounting plate by screws

5

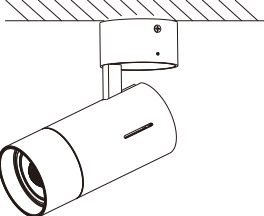

Adjust the illumination angle of the luminaire

6

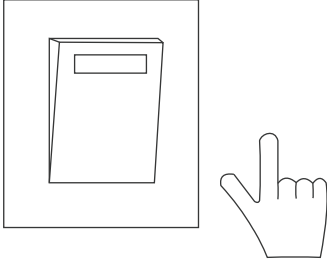


Turn on the power


SIRIO SPOT LED STD Series

Safety Instruction 

- Warning: Please strictly follow the instruction.**
- No change on the installation or replacement of spare parts.
- 1.Must be installed by professional electrician.
 2. Ensure power is switched off before installation.
 3. Use in the designated voltage range.
 - 4.Please confirm disconnect the power, before install , maintain ,change the light.
 - 5.No matter what circumstance, light can't be covered by heat insulation pad or similar materials.
 - 6.DO NOT light up the lighting fixture without proper grounding.
 - 7.Operating ambient temperature is -20 °C~+40°C.
 - 8.Non-certified professional are not allowed to disassemble and service this product.
 - 9.Risk of overheating or fire if the clearance distances are compromised.
 - 10.If this manual have any questions , please consult to the engineer, or contact our company.

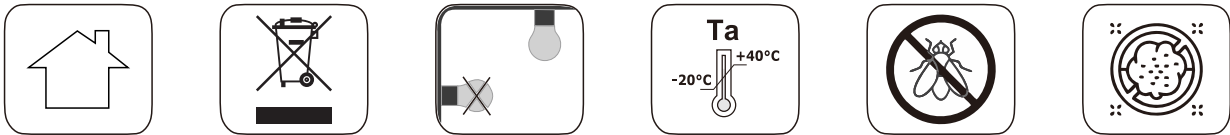

Matters needing attention

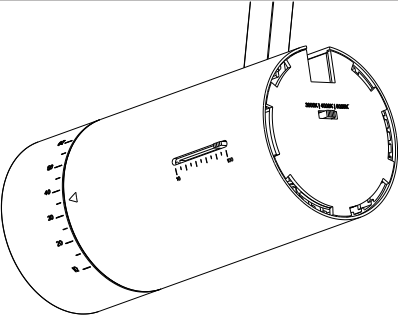

Please finish all the adjustment(Adjust color temperature 、 Adjust brightness or power 、 Adjust angle) before installation,in case of any danger.

Restricted use area: Lighting equipment is prohibited from being used in areas with insects or dust. Before the completion of site decoration, lighting equipment should not be exposed in dusty areas